


TIMBER ART DESIGN UK

VIN-164065-SB


ASSEMBLY INSTRUCTIONS

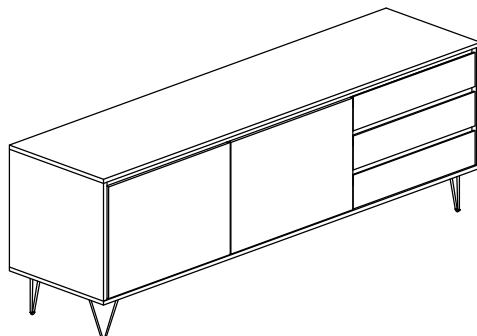


**IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER**

WARNING AND INSTRUCTIONS

- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

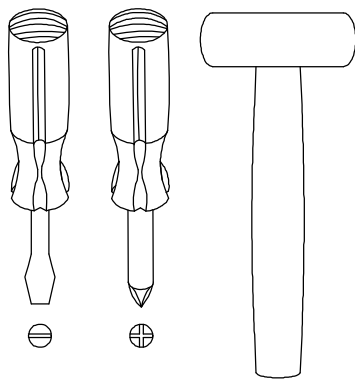


(Tools not provided)

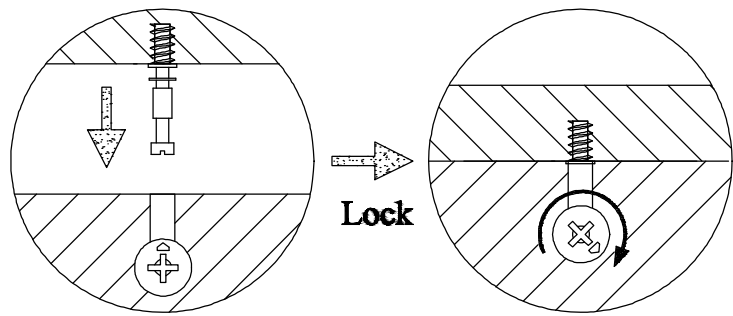

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works.....

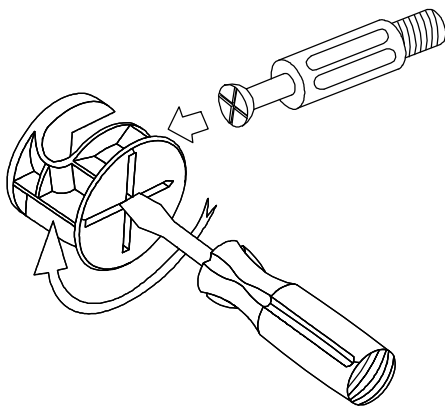

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT



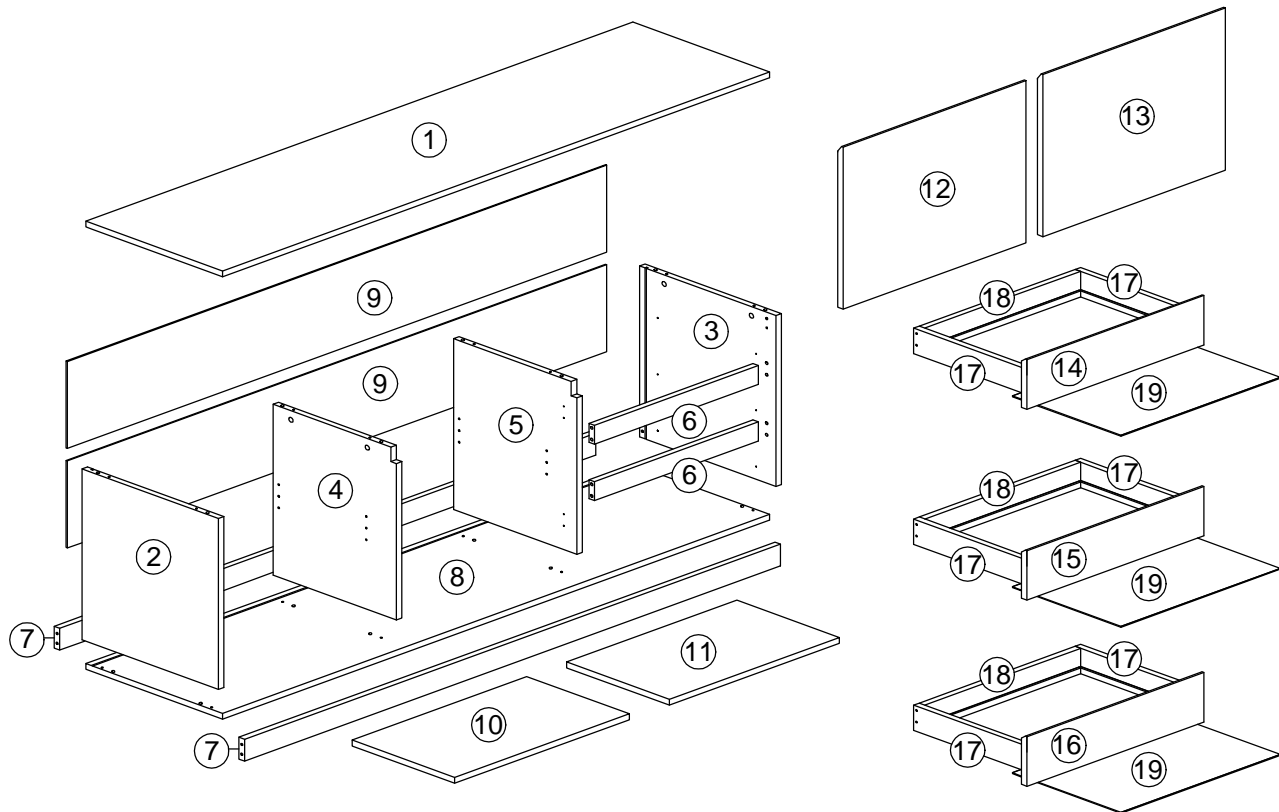










- 1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.**
- 2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.**
- 3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.**



PARTS LIST


NO.	PARTS					QTY
1	1600	X	400	X	15	1 PC
2	470	X	399	X	15	1 PC
3	470	X	399	X	15	1 PC
4	470	X	360	X	15	1 PC
5	470	X	360	X	15	1 PC
6	480	X	52	X	15	2 PCS
7	1566.5	X	60	X	15	2 PCS
8	1600	X	400	X	15	1 PC
9	1575	X	239	X	2.5	2 PCS
10	531	X	340	X	15	1 PC
11	523	X	340	X	15	1 PC
12	447	X	534	X	15	1 PC
13	447	X	534	X	15	1 PC
14	483	X	137	X	15	1 PC
15	483	X	137	X	15	1 PC
16	483	X	137	X	15	1 PC

HARDWARE LIST

NO.	DESCRIPTION		QTY
A		WOOD DOWEL M8 x 25MM	28
B		CAM NUT	12
C		CAM BOLT	12
D		CAM CAP	12
E		CB SCREW M3.5 x 16MM	70
F		CB SCREW M4 x 38MM	24
G		CSK CAP WOOD M6 x 40MM	8
H		ALLEY KEY M4	1
I		PVC CORNER L BRACKET	2
J		SHELF SUPPORT	8
K		SOFT CLOSE HINGES 7/8	2
L		SOFT CLOSE HINGES 2/8	2
M		DRAWER SLIDE 14"	6
N		DRAWER SLIDE 14"	6

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



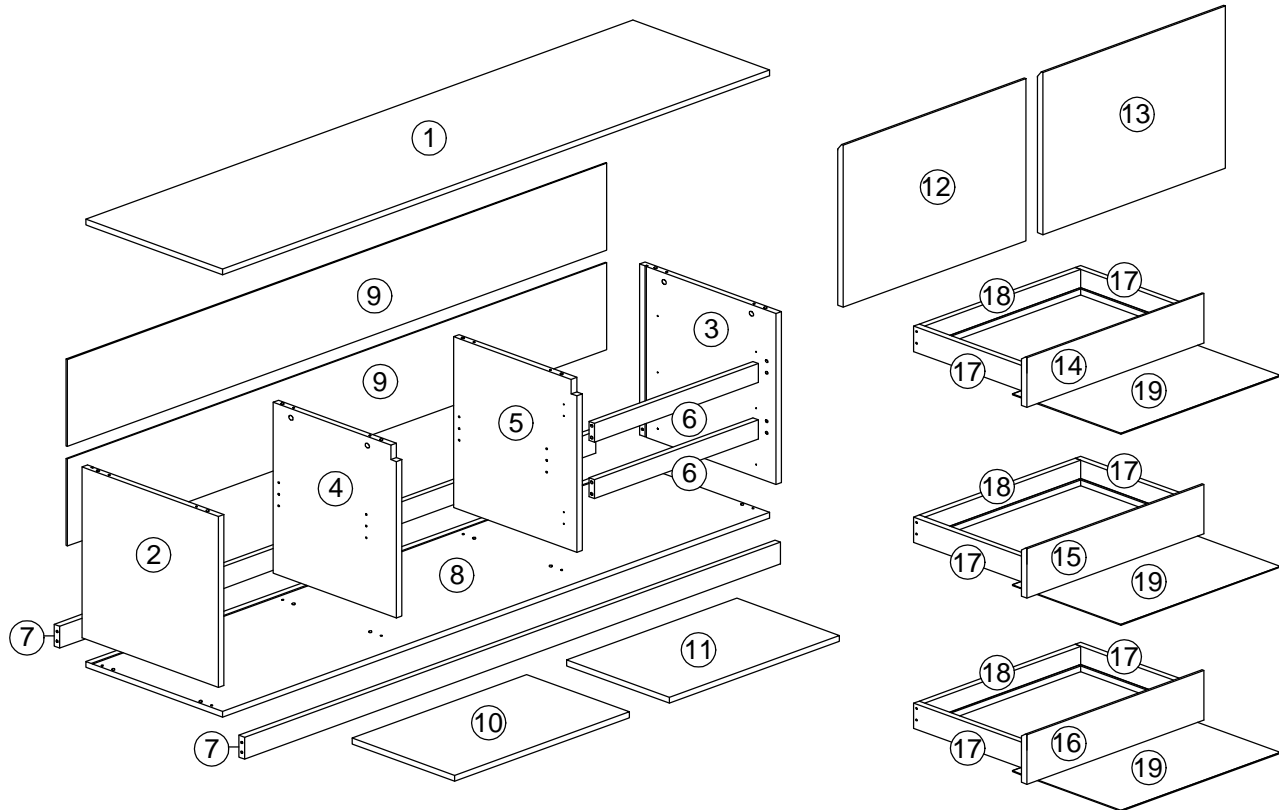

PARTS LIST

NO.	PARTS					QTY
17	340	X	76	X	15	6 PCS
18	424	X	76	X	15	6 PCS
19	433	X	318	X	2.5	3 PCS

HARDWARE LIST


NO.	DESCRIPTION		QTY
O		BOTTOM SUPPORT METAL LEG	2
P		METAL LEG	4
Q		3MM PVH-1566MM	1
R		EURO SCREW 6 x 9	12

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 1

A	 WOOD DOWEL M8 x 25MM	28
---	--	----

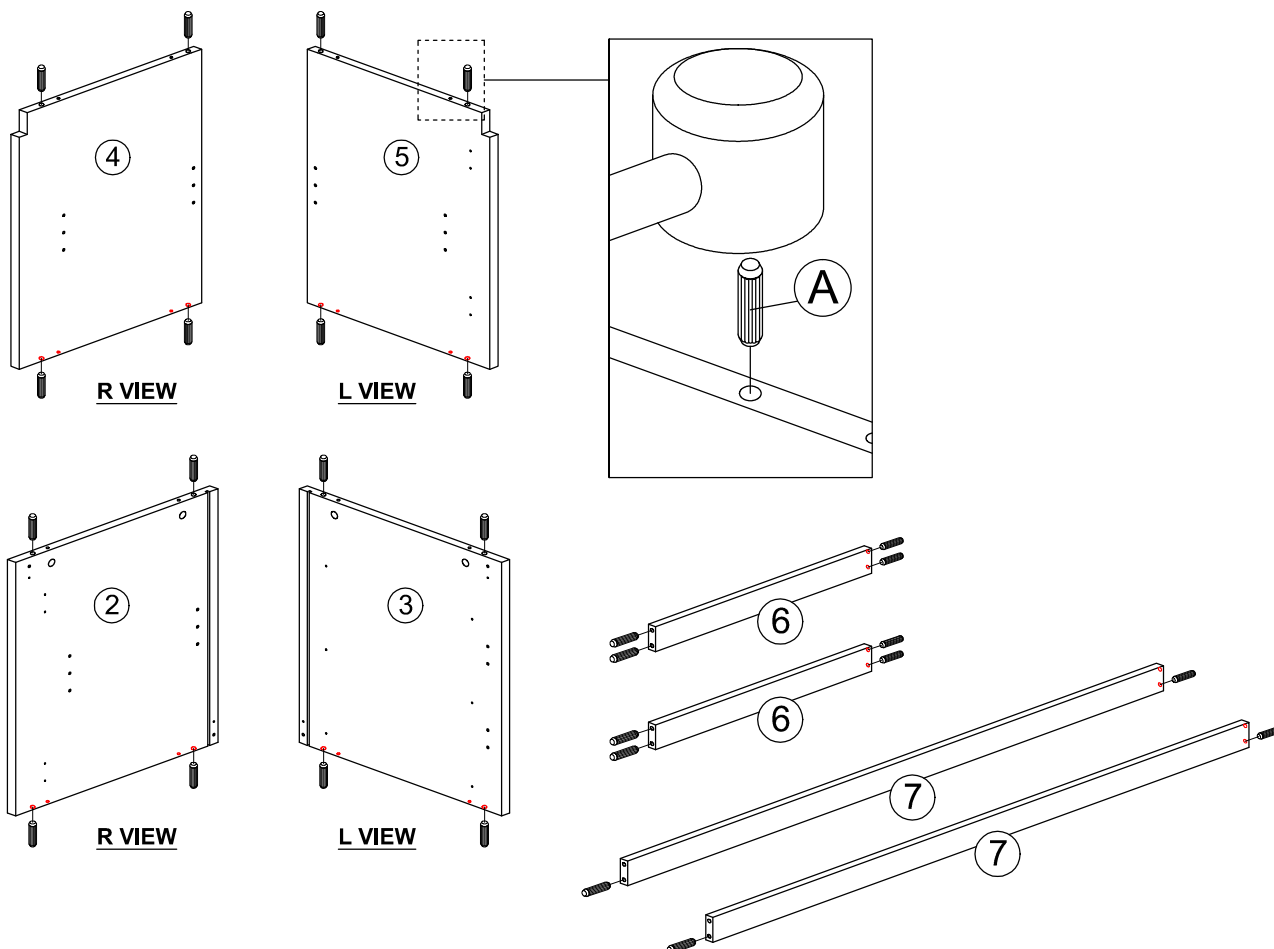

STEP 2

C	 CAM BOLT	12
---	--	----


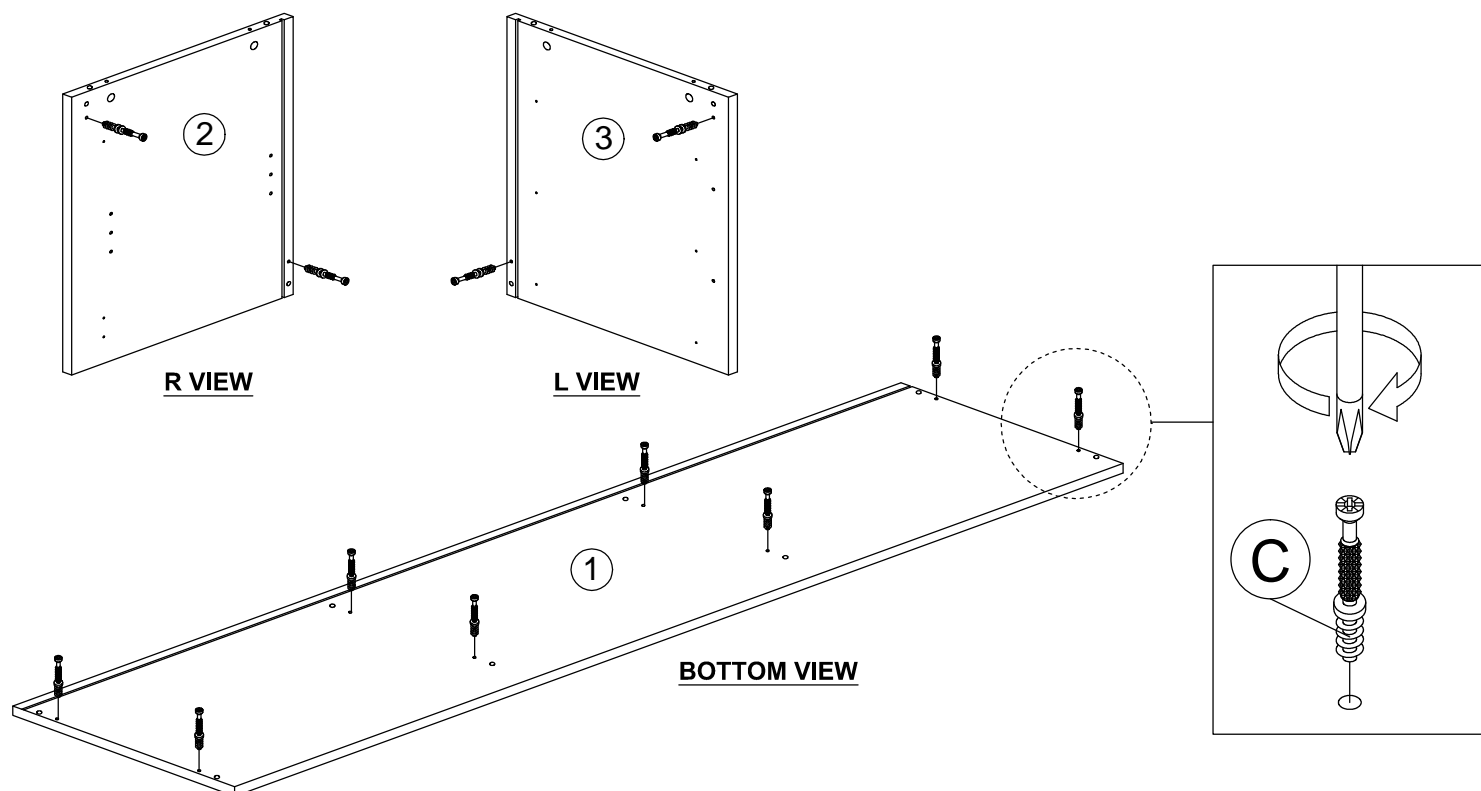


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 3


J		SHELF SUPPORT	8
---	--	---------------	---

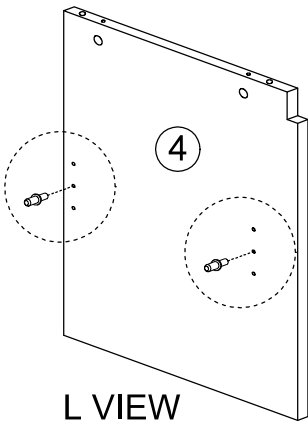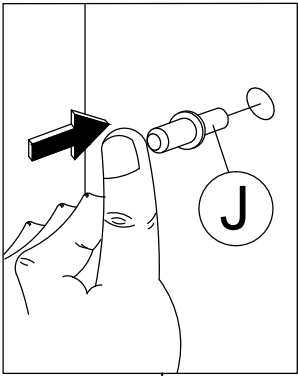


L VIEW

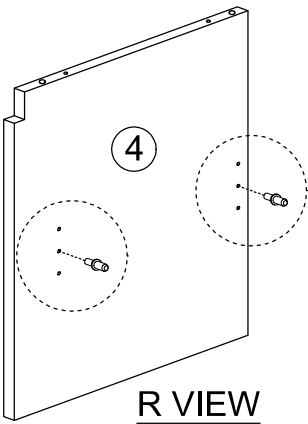

R VIEW



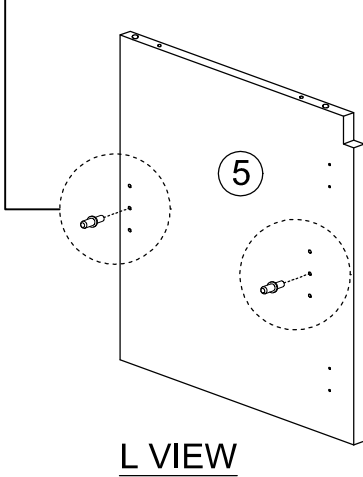




L VIEW

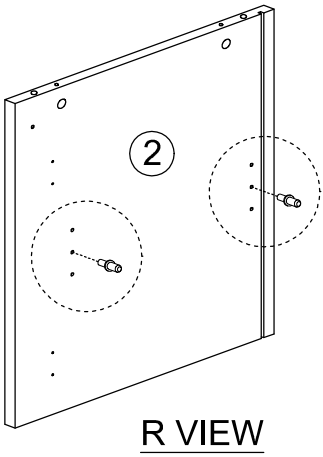

R VIEW

STEP 4



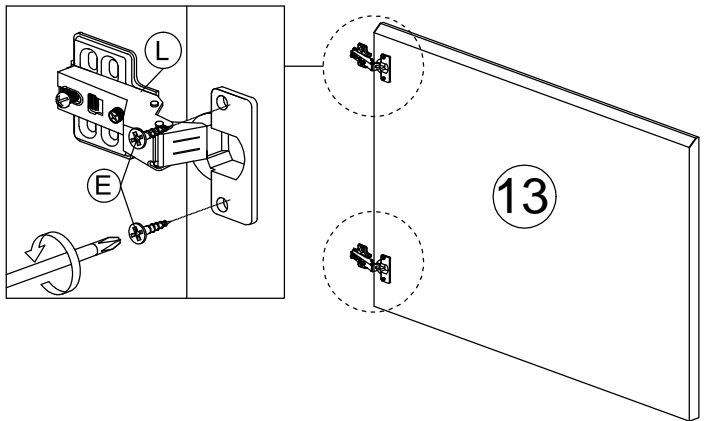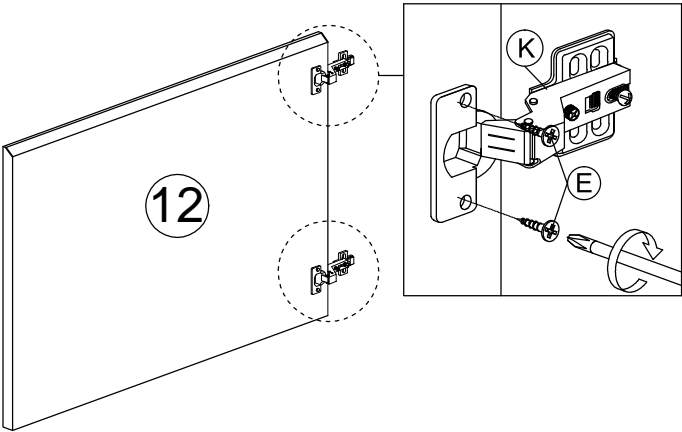E		CB SCREW M3.5 x 16MM	8
K		SOFT CLOSE HINGES 7/8	2
L		SOFT CLOSE HINGES 2/8	2




THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





STEP 5

M	 DRAWER SLIDE 14"	6
R	 EURO SCREW 6 x 9	12


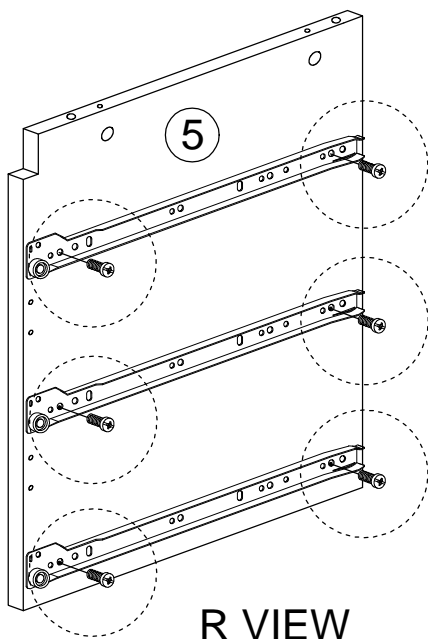



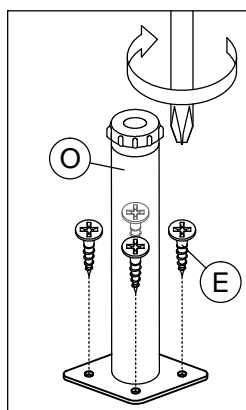
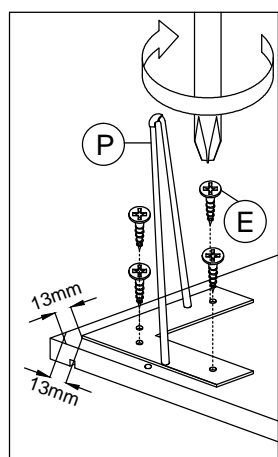
R VIEW

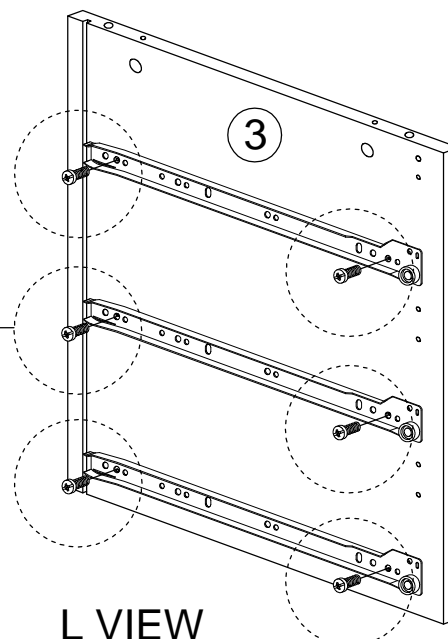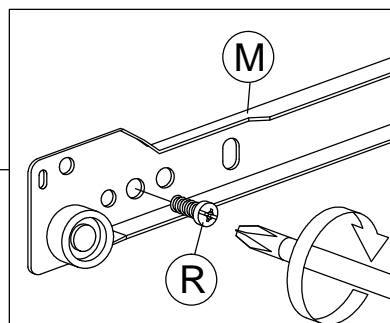

L VIEW

STEP 6

E	 CB SCREW M3.5 x 16MM	24
O	 BOTTOM SUPPORT METAL LEG	2
P	 METAL LEG	4




8


BOTTOM VIEW

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.






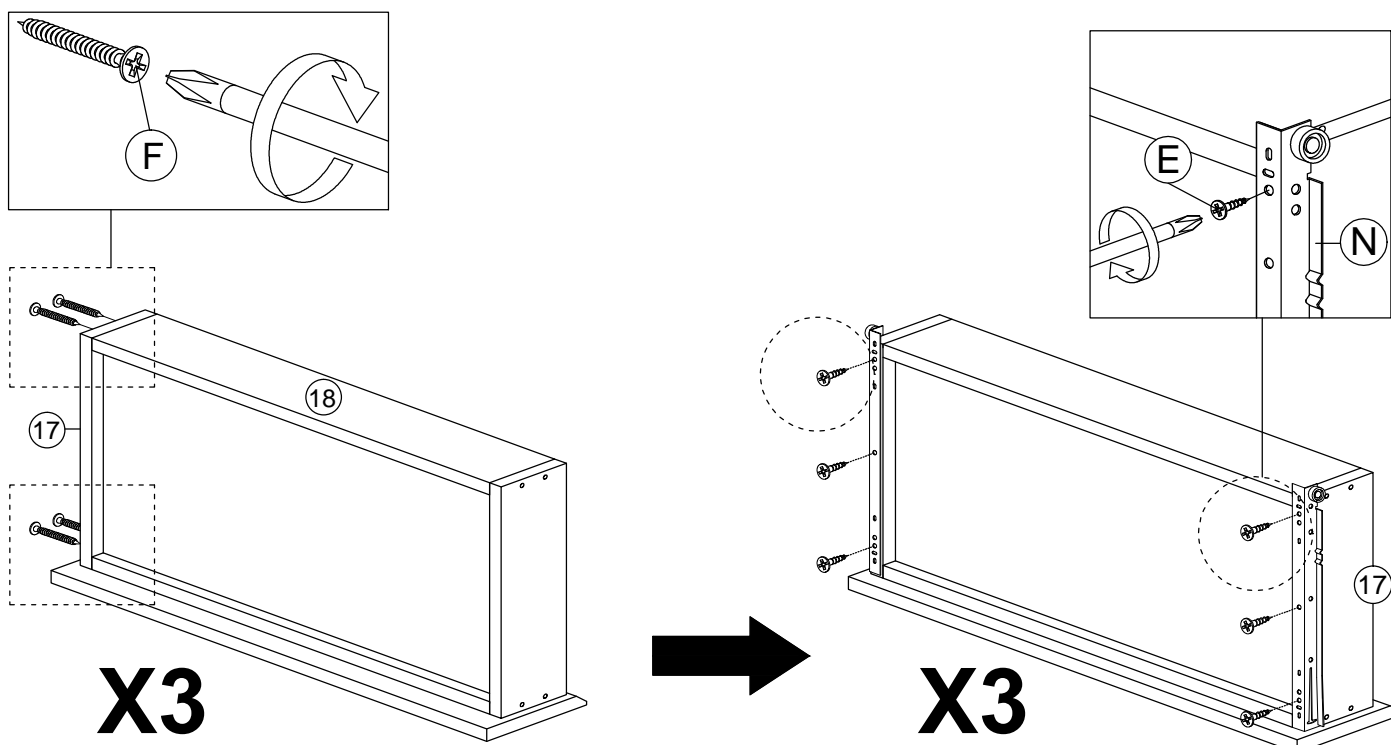
STEP 7

F	 CB SCREW M4 x 38MM	12
---	--	----

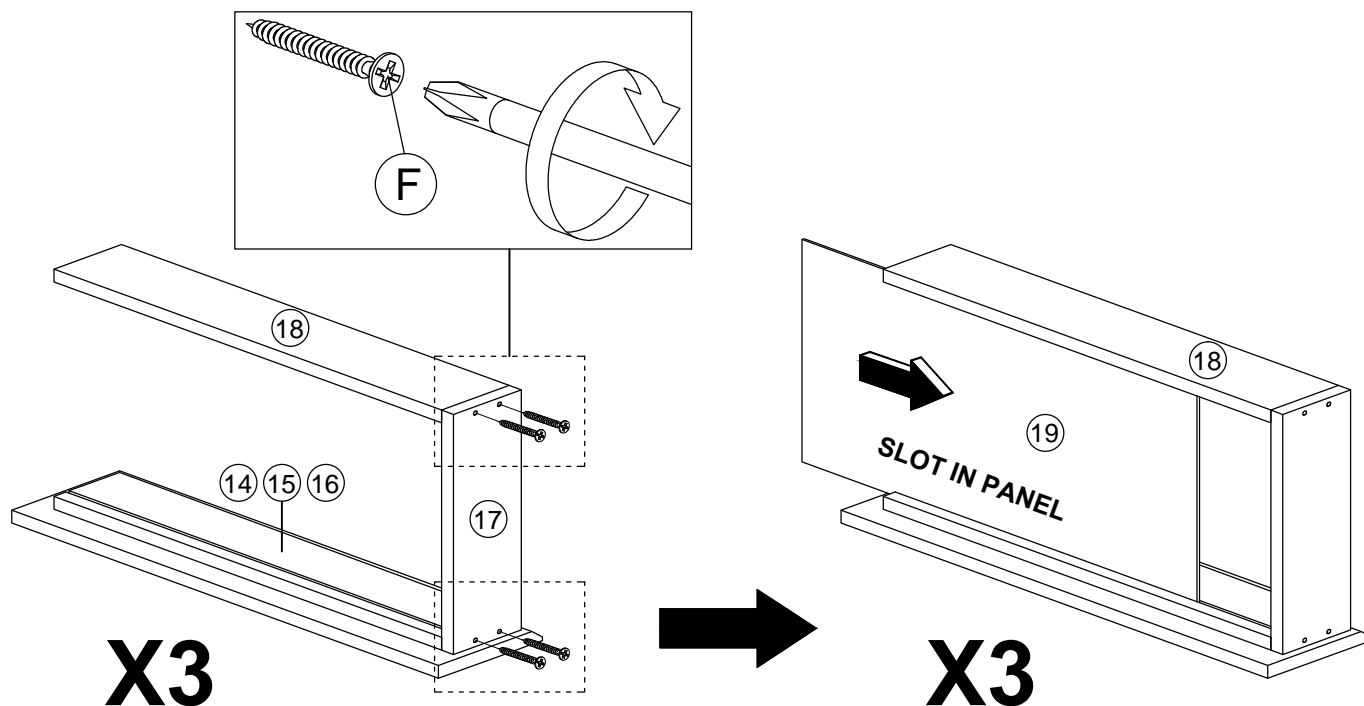

STEP 8


E	 CB SCREW M3.5 x 16MM	18
F	 CB SCREW M4 x 38MM	12
N	 DRAWER SLIDE 14"	6






THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




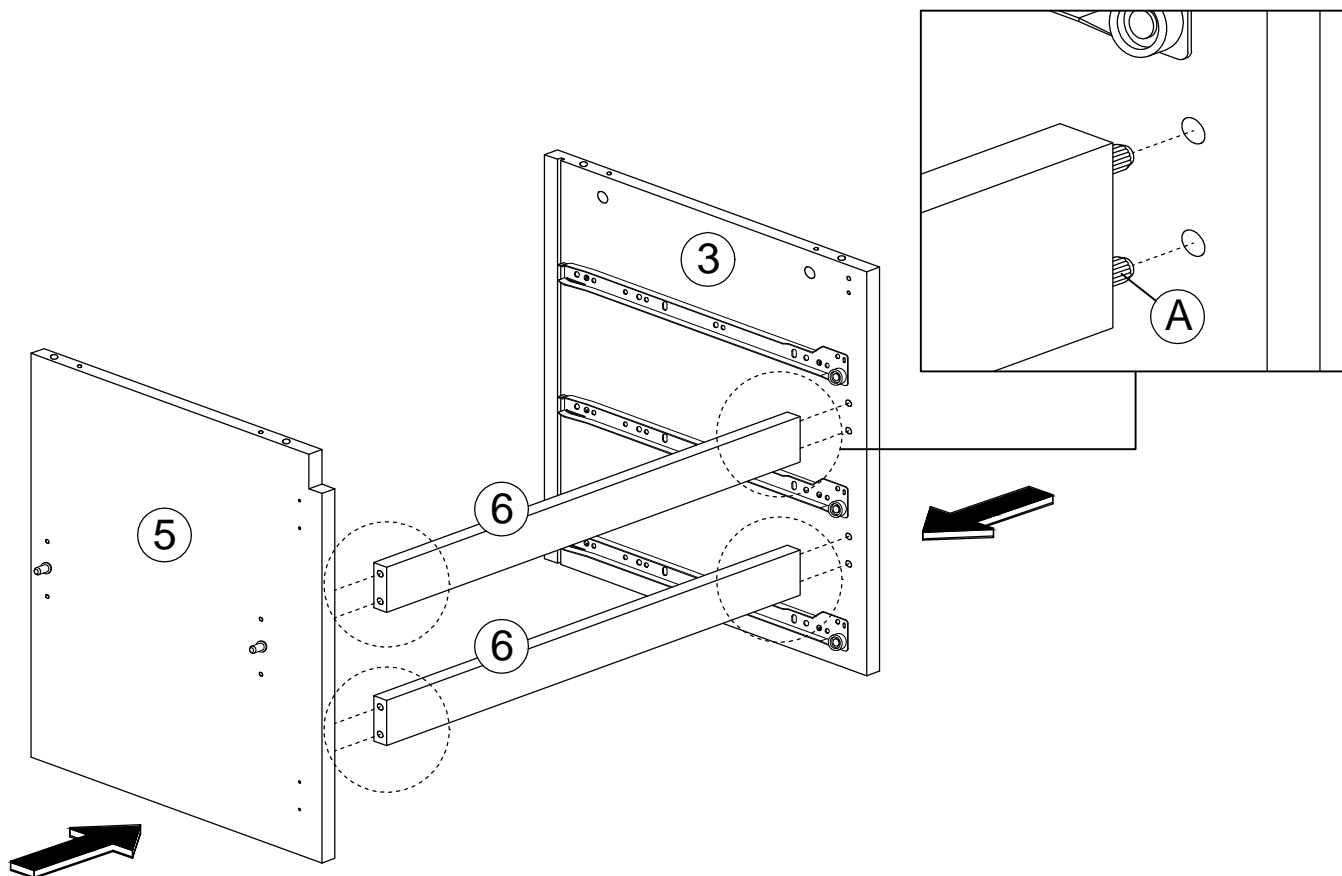


STEP 9



STEP 10

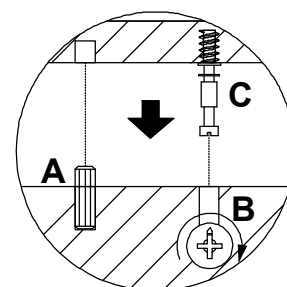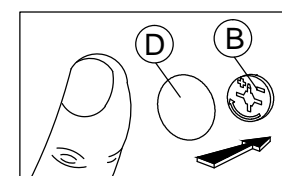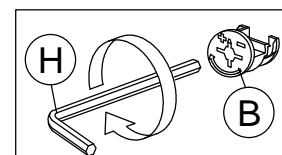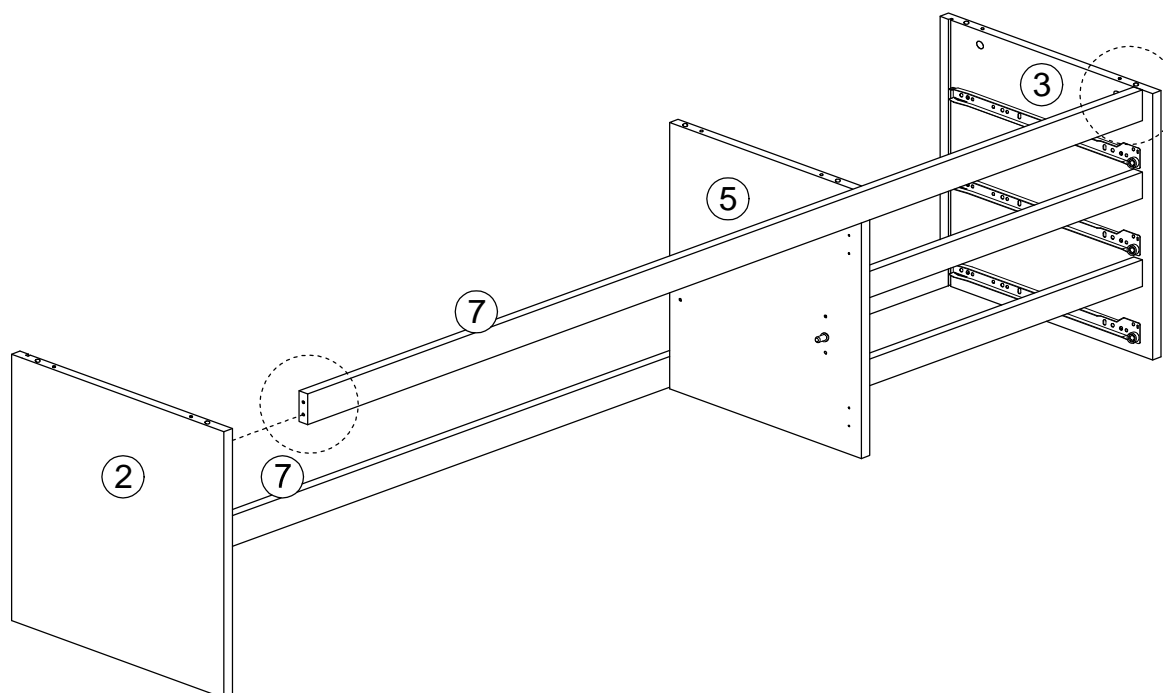

B		CAM NUT	4
D		CAM CAP	4
H		ALLEN KEY M4	1




THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




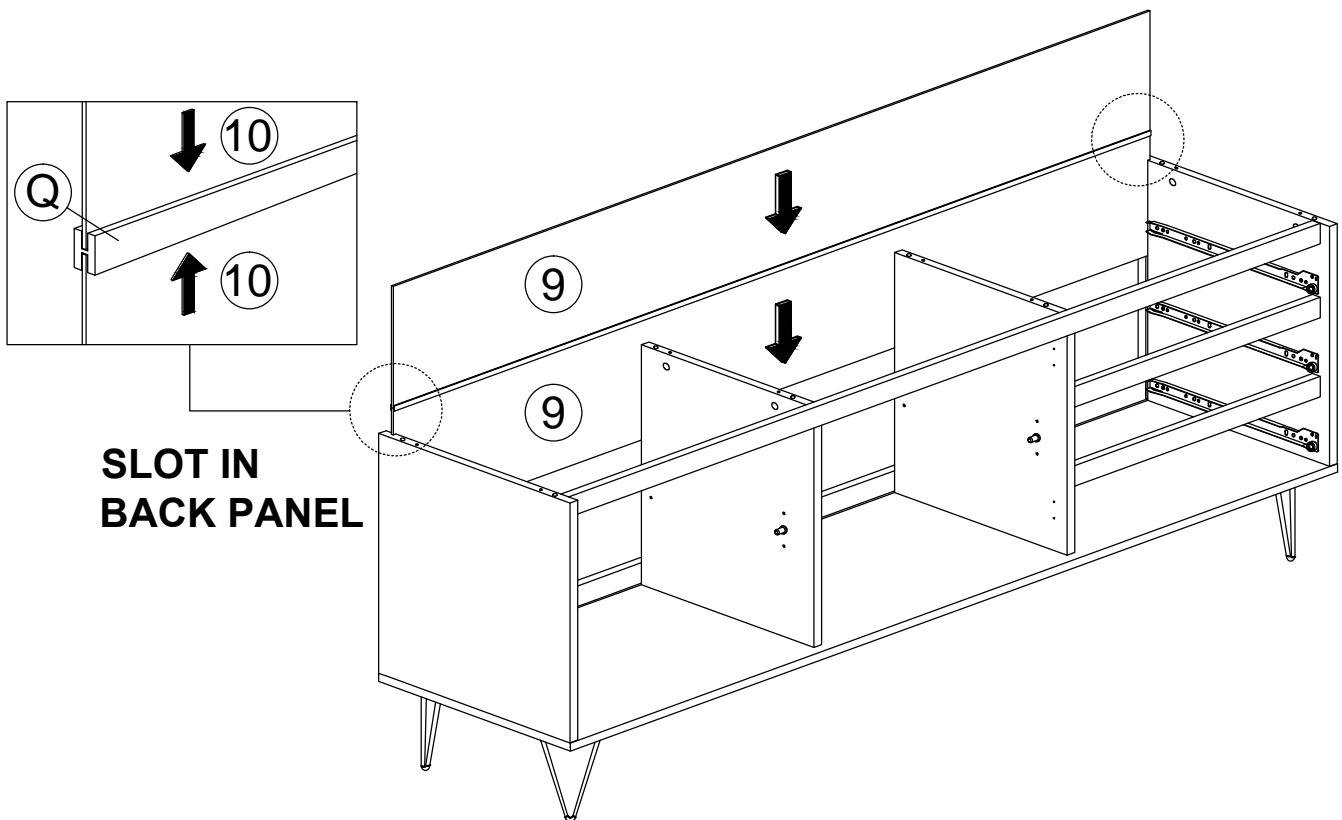
STEP 11

G		CSK CAP WOOD M6 x 40MM	8
H		ALLEN KEY M4	1

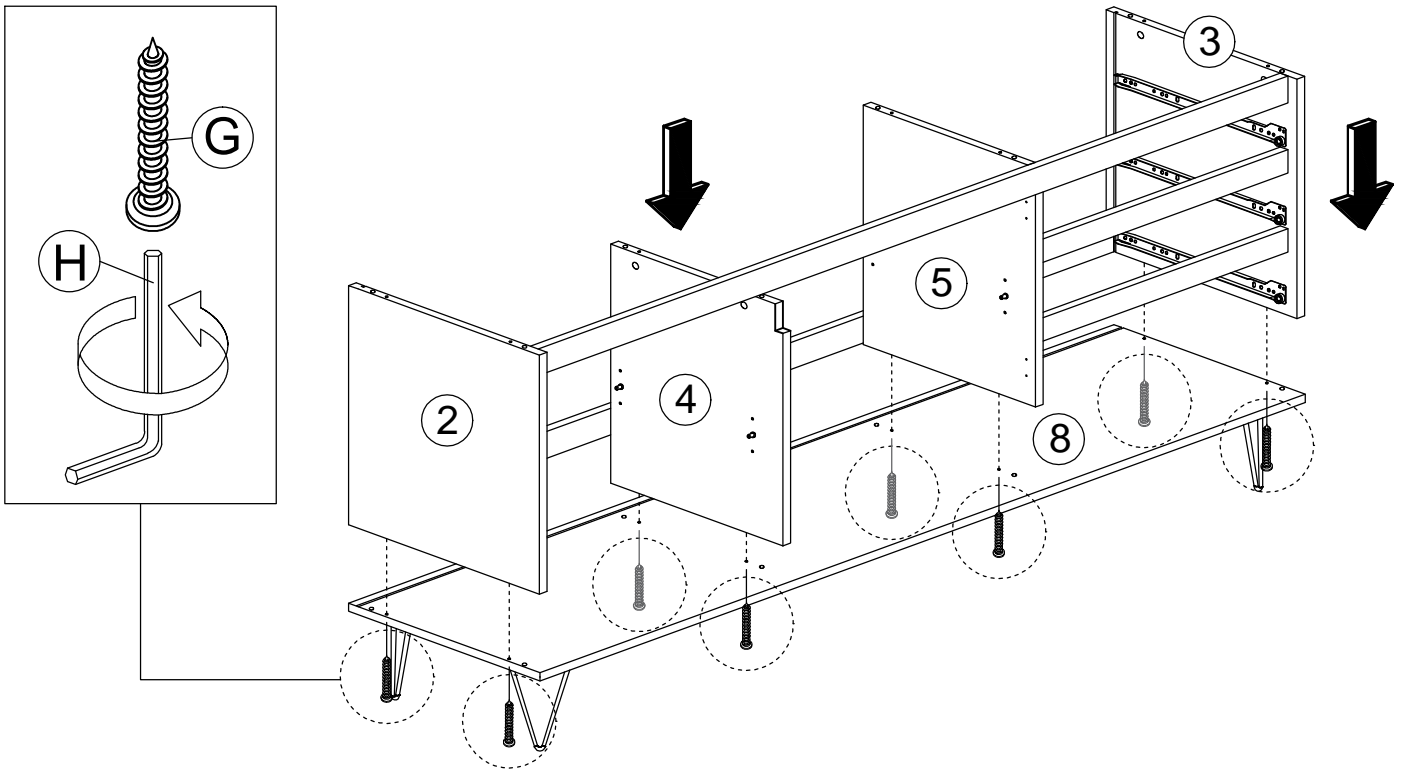

STEP 12

Q		3MM PVH-1566MM	1
---	---	----------------	---






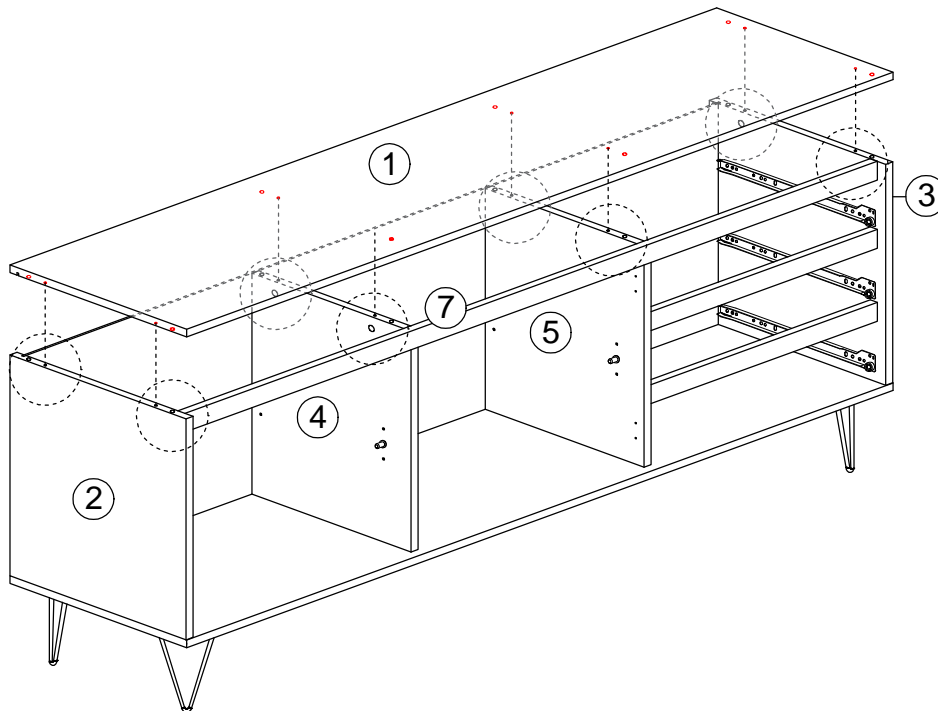
**SLOT IN
BACK PANEL**

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.






STEP 13

B		CAM NUT	8
D		CAM CAP	8
H		ALLEN KEY M4	1



STEP 14


E		CB SCREW M3.5 x 16MM	4
I		PVC CORNER L BRACKET	2

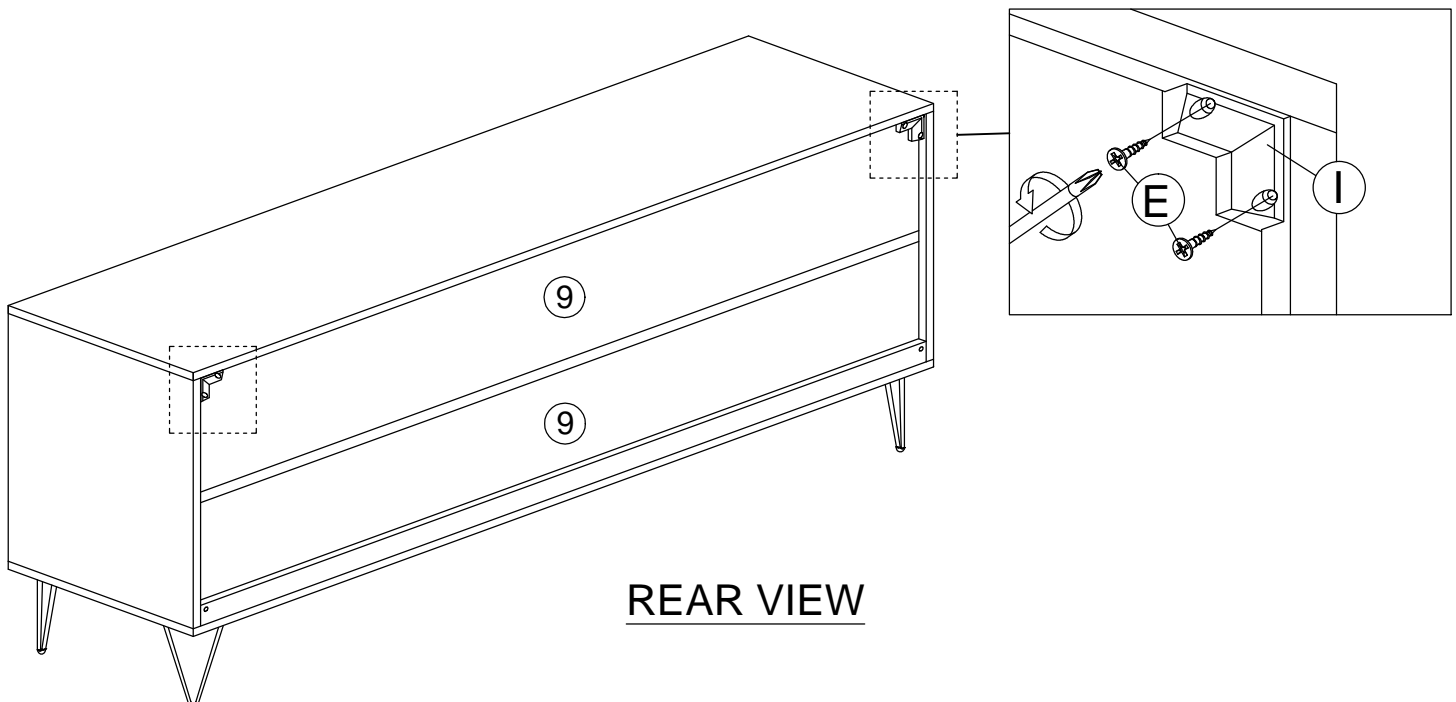


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







STEP 15

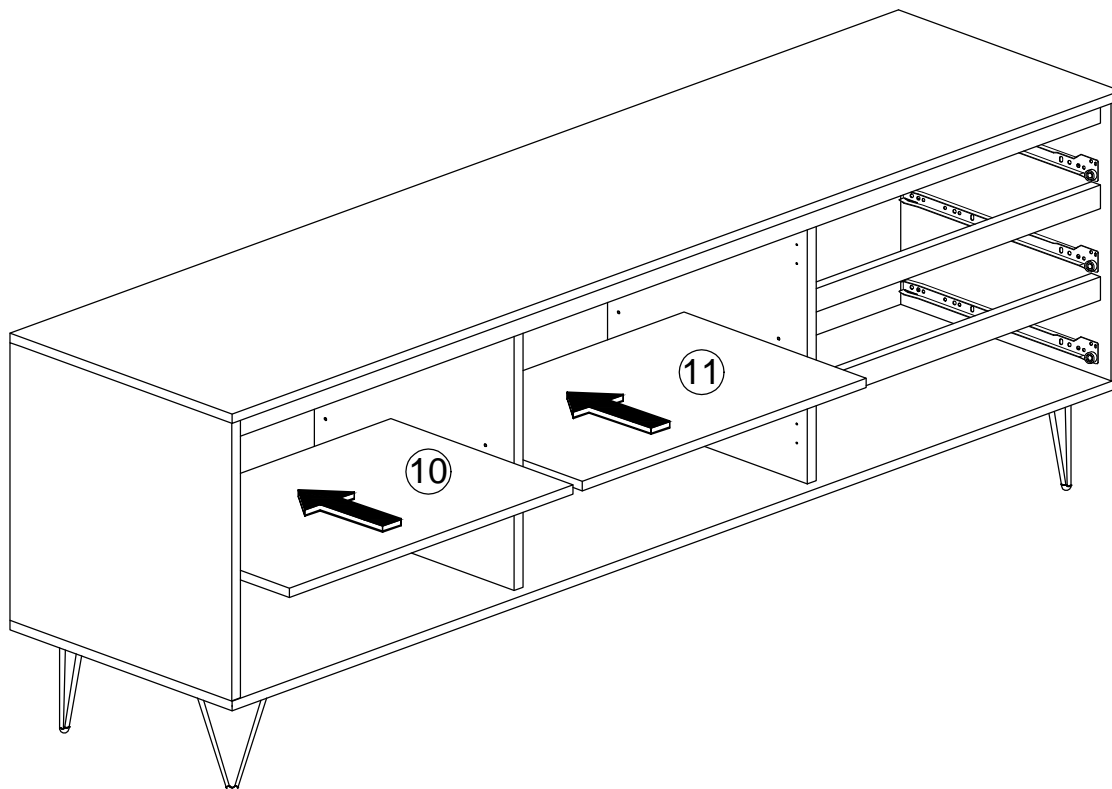

STEP 16


E	 CB SCREW M3.5 x 16MM	16
---	--	----

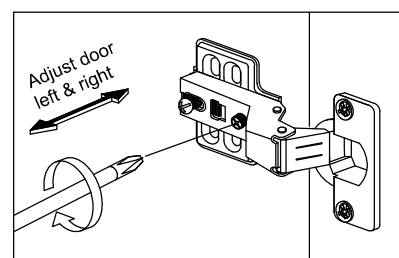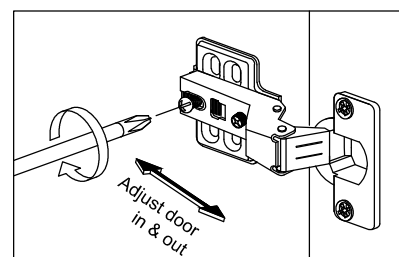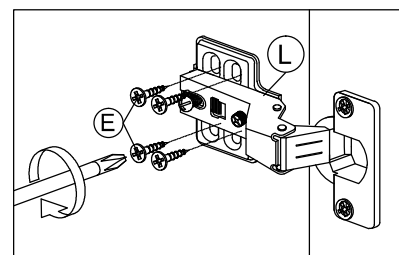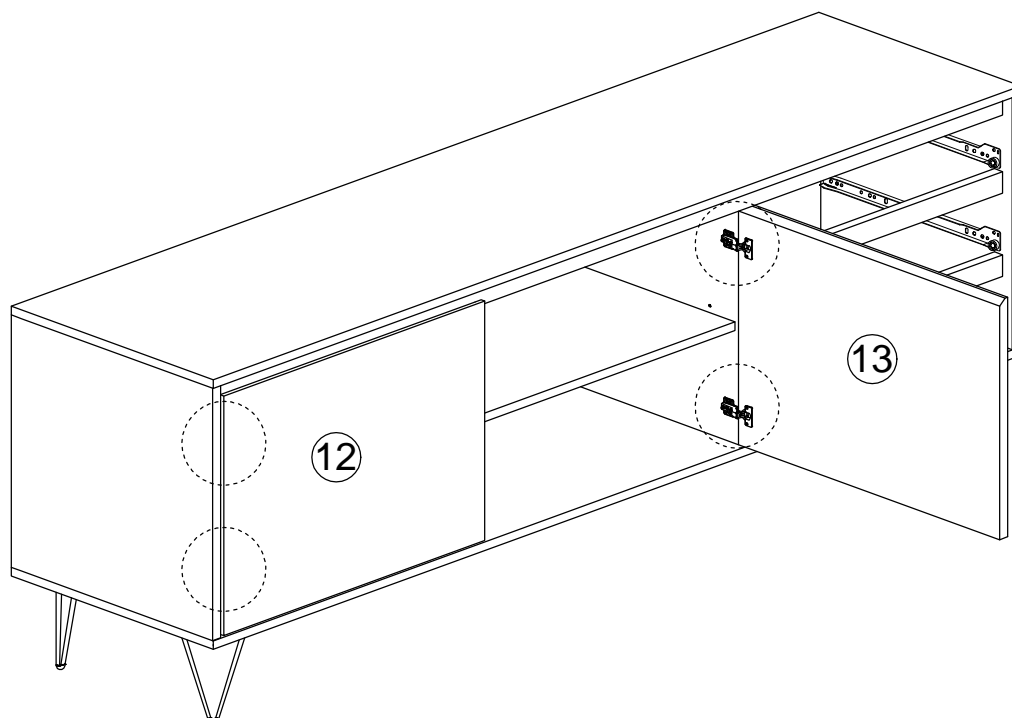


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



STEP 17

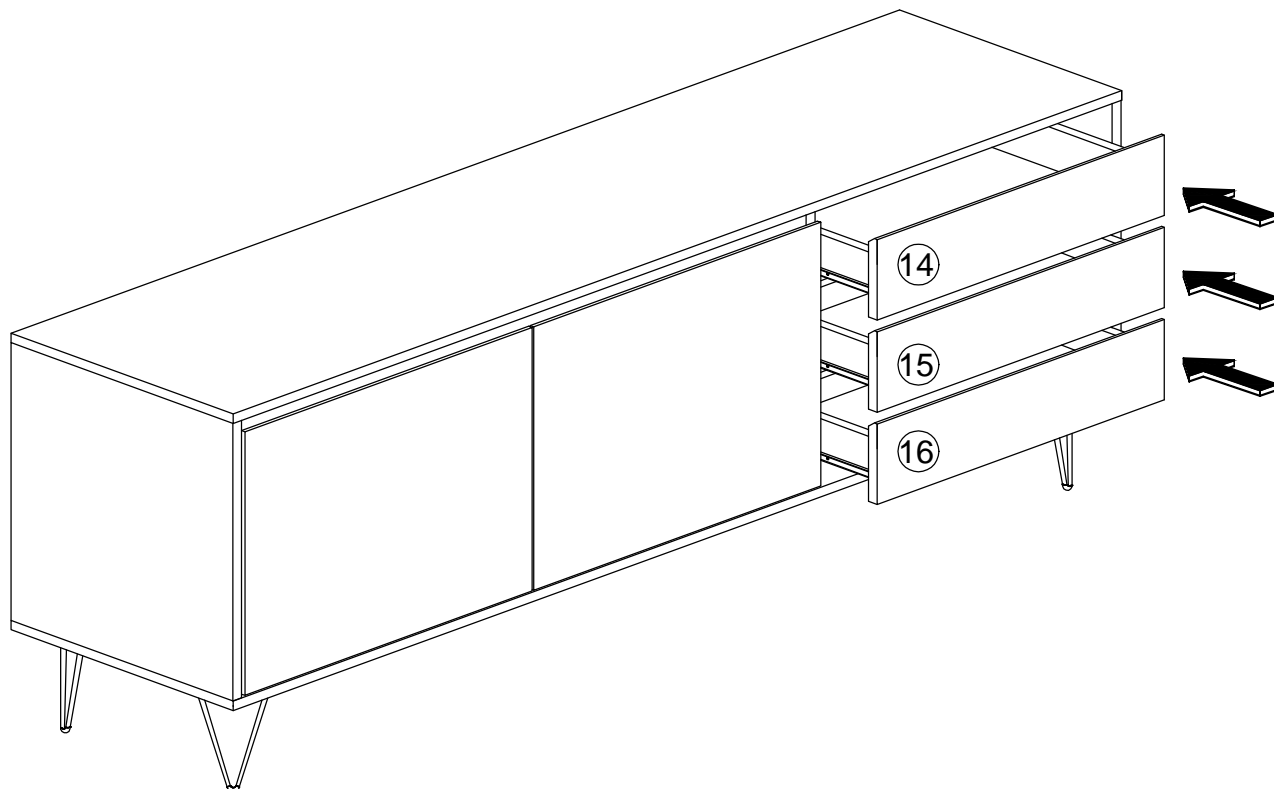

COMPLETED

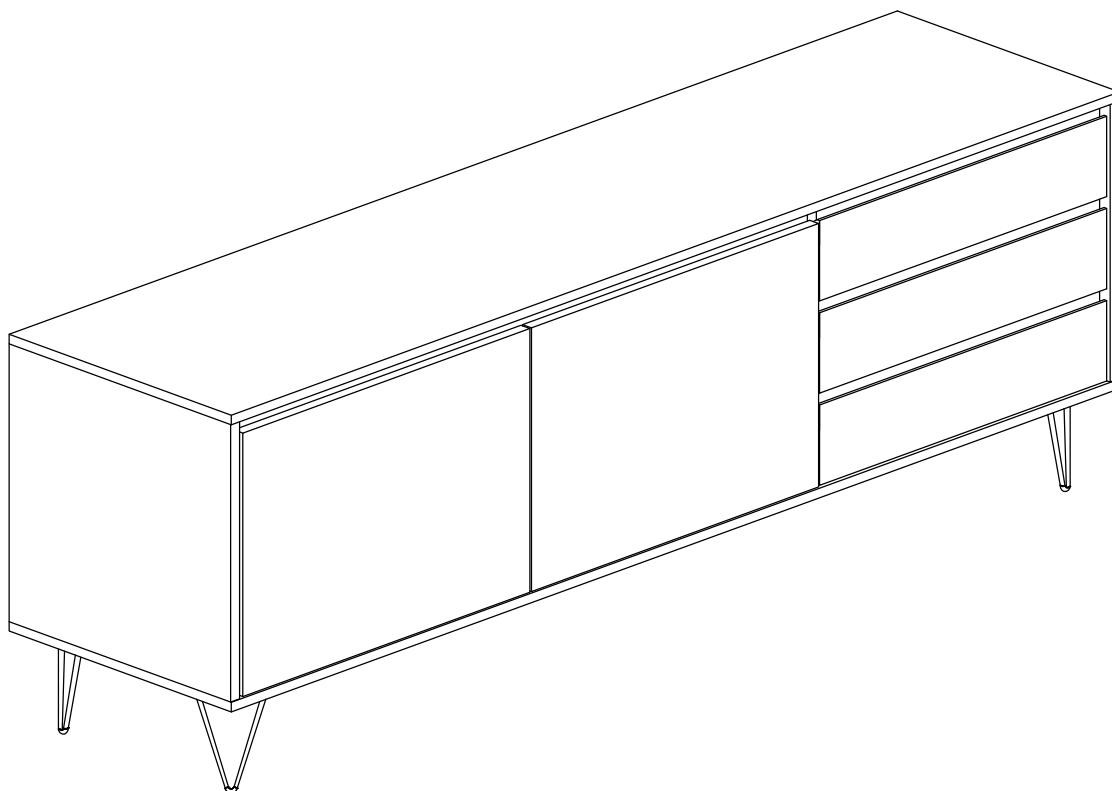

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

